

## Настройка выходного тока

Рабочий (RMS) , А	По умолчанию	1.8	2.1	2.3	2.6	2.9	3.2	3.5	3.8	4.1	4.4	4.6	4.9	5.2	5.5	5.7
		Пиковый, А	2.5	2.9	3.2	3.8	4.0	4.5	4.9	5.3	5.7	6.2	6.4	6.9	7.3	7.7
SW4	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	ON	ON	ON	ON	ON
SW3	OFF	OFF	OFF	OFF	ON	ON	ON	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON
SW2	OFF	OFF	ON	ON	OFF	OFF	ON	ON	OFF	OFF	ON	ON	OFF	OFF	ON	ON
SW1	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON

SW5: OFF=Половинный ток

ON=Полный ток