



See how you will connect. Here we show a few examples.

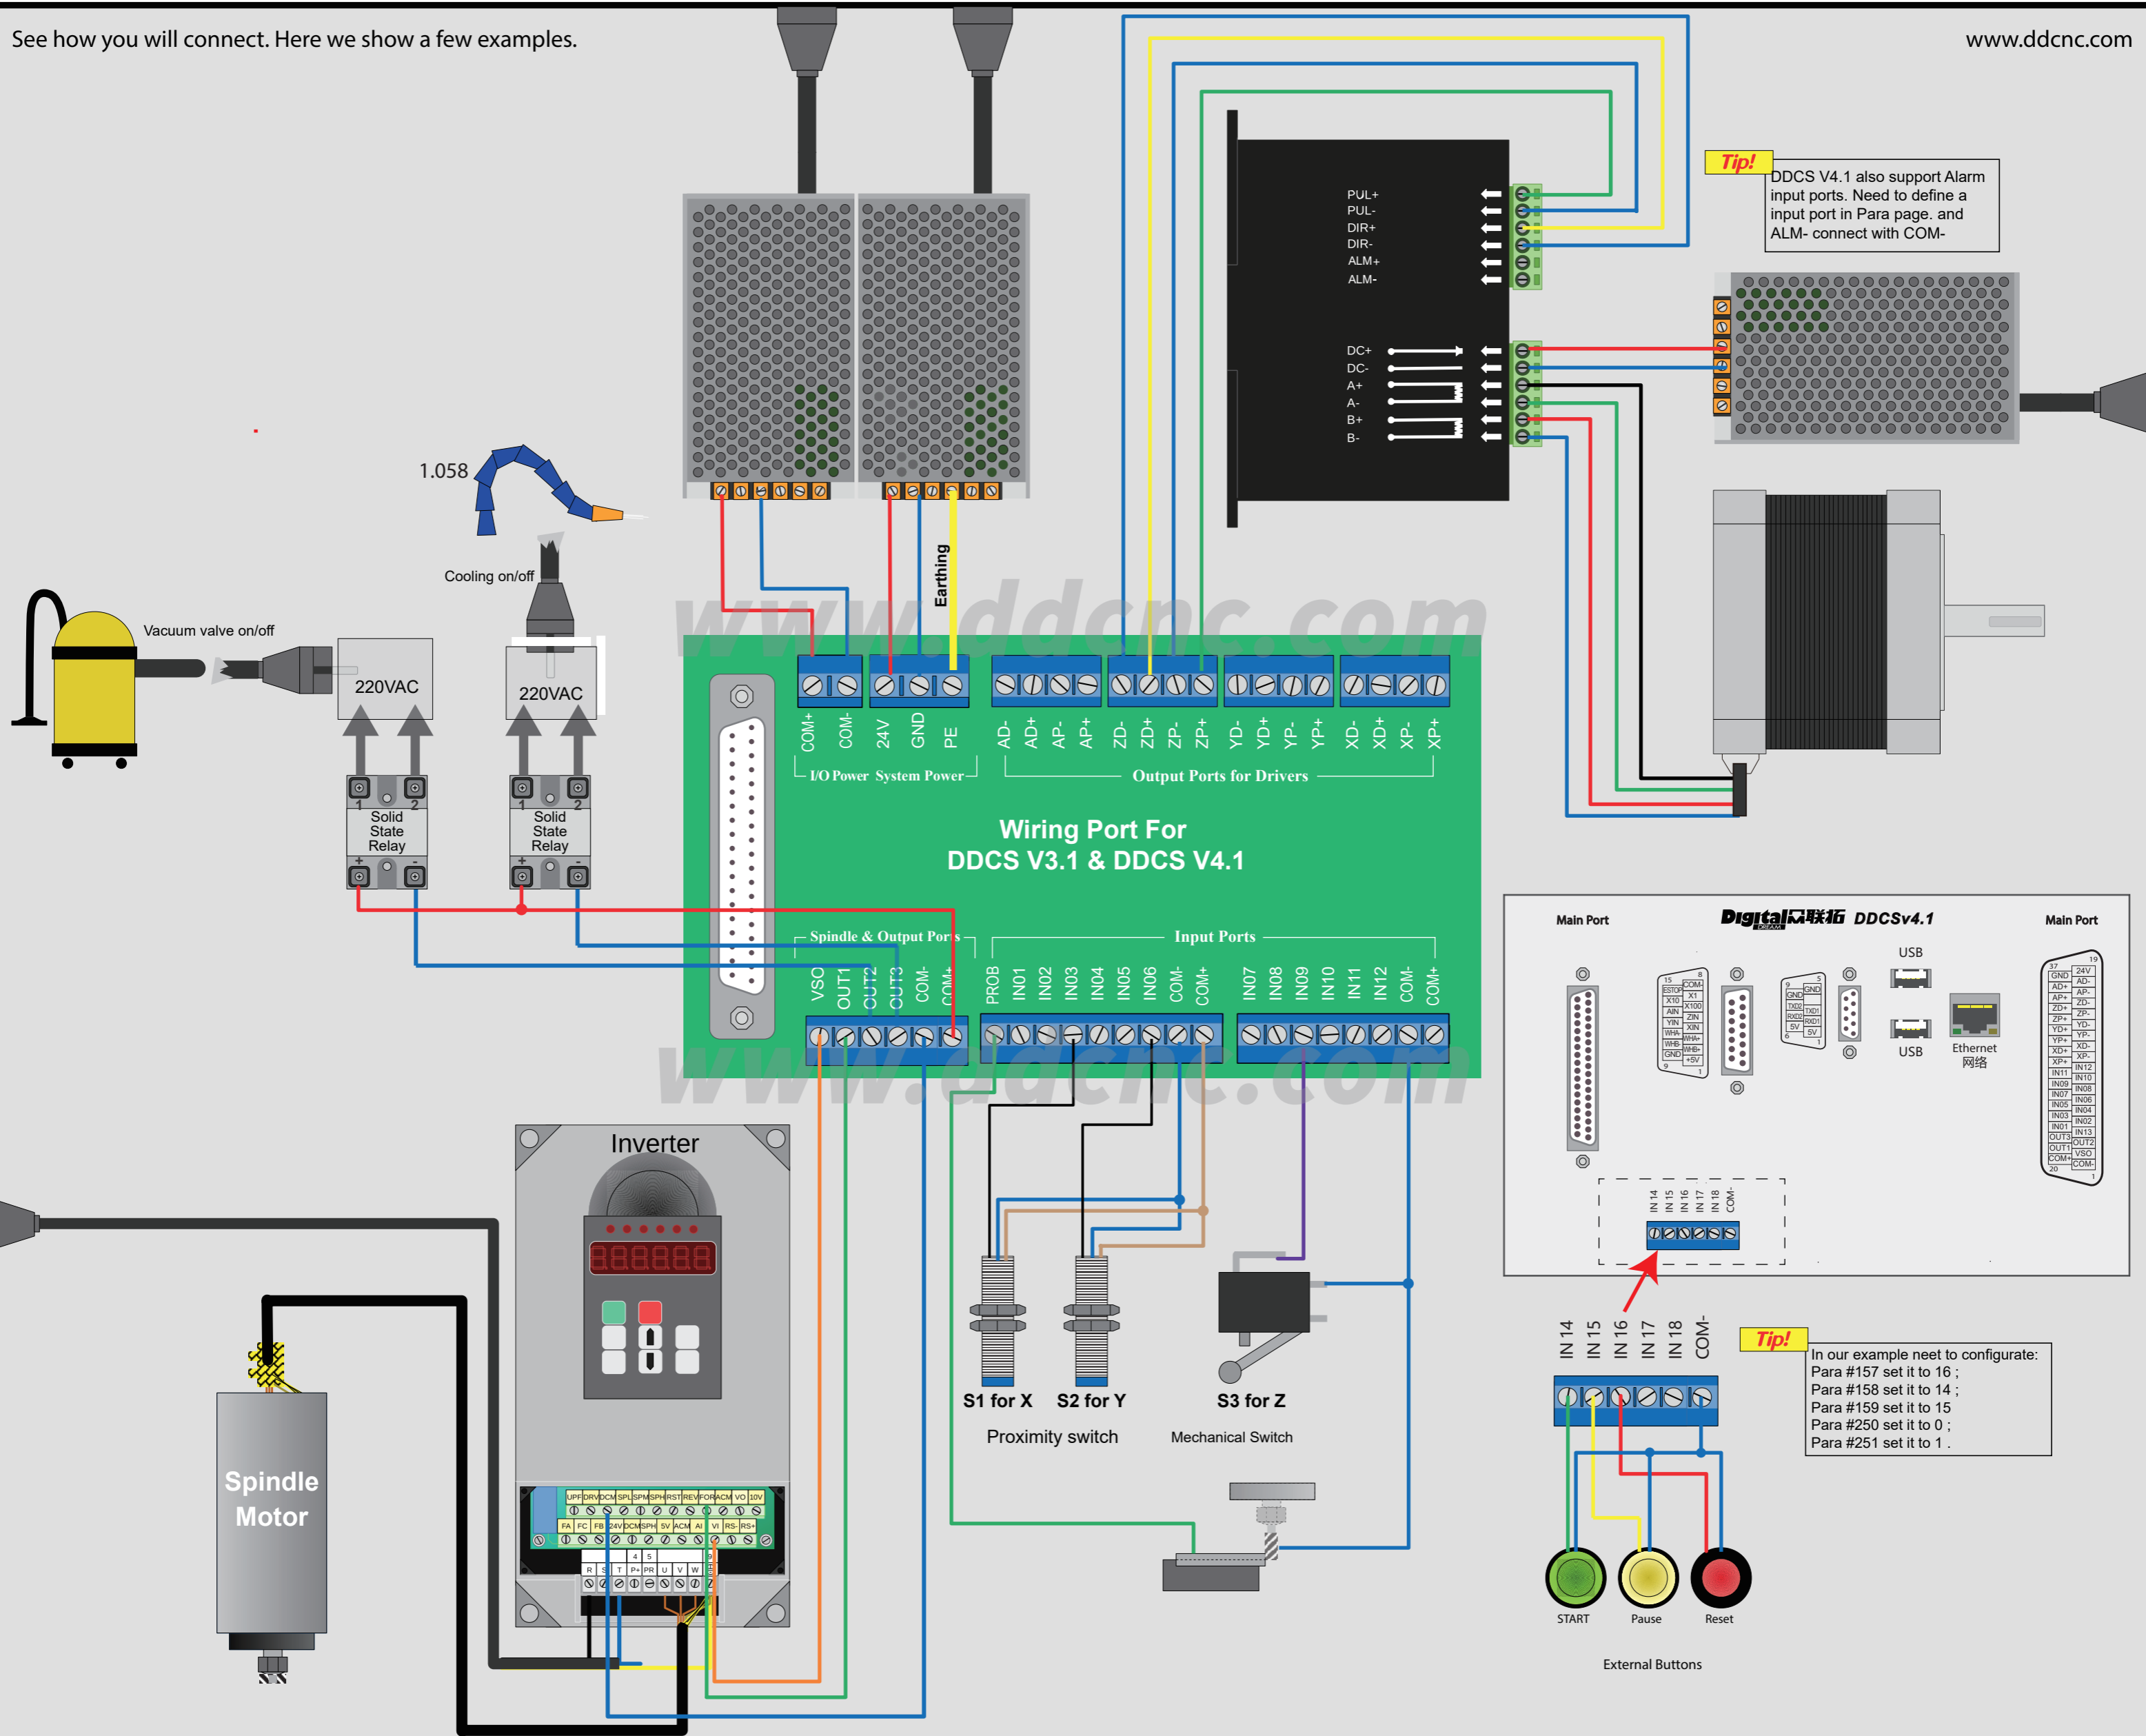

Tip! DDCS V4.1 also support Alarm input ports. Need to define a input port in Para page. and ALM- connect with COM-

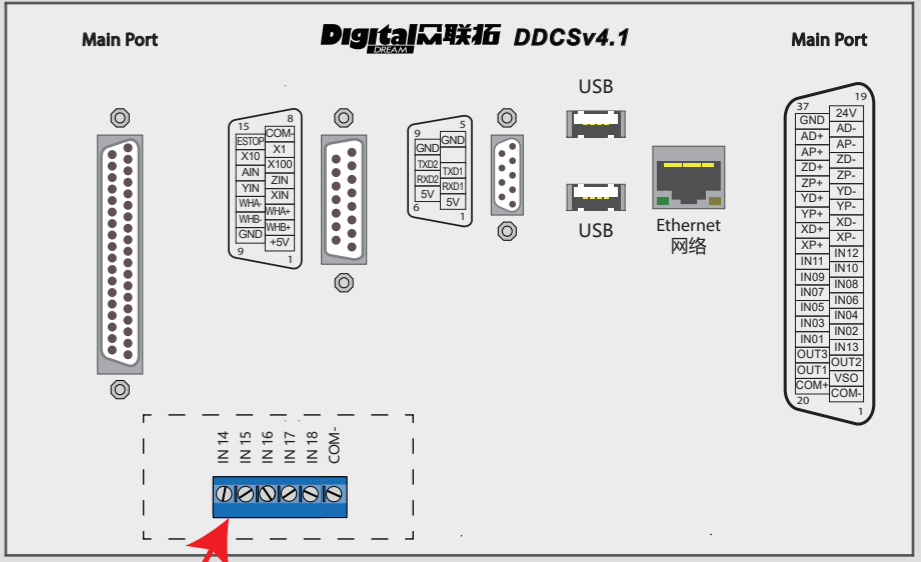

Tip! In our example need to configure:
 Para #157 set it to 16 ;
 Para #158 set it to 14 ;
 Para #159 set it to 15 ;
 Para #250 set it to 0 ;
 Para #251 set it to 1 .

DP37 PIN No.	1	20	2	21	3	22	4	23	5	24	6	25	7	26	8	27	9	28	10	29	11	30	12	31	13	32	14	33	15	34	16	35	17	36	18	37	19
Wiring Board of V3.1	COM-	COM+	VSO	M3	M8	M10	PROB	LIMITX+	LIMITX-	HOMEX	LIMITY+	LIMITY-	HOMEY	LIMITZ+	LIMITZ-	HOMEZ	LIMITA+	LIMITA-	HOMEA	XP+	XP-	XD+	XD-	XP+	YP-	YD+	YD-	YP+	ZP-	ZD+	ZD-	ZP+	AP-	AD+	AD-	GND	24V
Wiring Board of V4.1	COM-	COM+	VSO	OUT1	OUT2	OUT3	IN13	IN01	IN02	IN03	IN04	IN05	IN06	IN07	IN08	IN09	IN10	IN11	IN12	XP+	XP-	XD+	XD-	XP+	YP-	YD+	YD-	YP+	ZP-	ZD+	ZD-	ZP+	AP-	AD+	AD-	GND	24V