

Настройка микрошага

| PU/Rev | По умолчанию | 400 | 800 | 1600 | 3200 | 6400 | 12800 | 25600 | 1000 | 2000 | 4000 | 5000 | 8000 | 10000 | 20000 | 25000 |
|--------|--------------|-----|-----|------|------|------|-------|-------|------|------|------|------|------|-------|-------|-------|
| SW8 | ON | ON | ON | ON | ON | ON | ON | ON | OFF | OFF | OFF | OFF | OFF | OFF | OFF | OFF |
| SW7 | ON | ON | ON | ON | OFF | OFF | OFF | OFF | ON | ON | ON | ON | OFF | OFF | OFF | OFF |
| SW6 | ON | ON | OFF | OFF | ON | ON | OFF | OFF | ON | ON | OFF | OFF | ON | ON | OFF | OFF |
| SW5 | ON | OFF | ON | OFF | ON | OFF | ON | OFF | ON | OFF | ON | OFF | ON | OFF | ON | OFF |

Настройка выходного тока

| Рабочий (RMS), А | По умолчанию | 1.6 | 2.3 | 3.2 | 3.7 | 4.4 | 5.2 | 5.9 |
|------------------|--------------|-----|-----|-----|-----|-----|-----|-----|
| Пиковый, А | | 2.2 | 3.2 | 4.2 | 5.2 | 6.3 | 7.2 | 8.2 |
| SW3 | OFF | OFF | OFF | OFF | ON | ON | ON | ON |
| SW2 | OFF | OFF | ON | ON | OFF | OFF | ON | ON |
| SW1 | OFF | ON | OFF | ON | OFF | ON | OFF | ON |

SW4: OFF=Половинный ток

ON=Полный ток