## Настройка микрошага

Микроша	2	4	8	16	32	64	128	256	5	10	20	25	40	50	100	200
Г																
PU/REV	40	800	160	320	640	1280	2560	5120	100	200	400	500	800	1000	2000	4000
	0		0	0	0	0	0	0	0	0	0	0	0	0	0	0
SW5	ON	OF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF
		F														
SW6	ON	ON	OFF	OFF	ON	ON	OFF	OFF	ON	ON	OFF	OFF	ON	ON	OFF	OFF
SW7	ON	ON	ON	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	OFF	OFF	OFF	OFF
SW8	ON	ON	ON	ON	ON	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF