Настройка микрошага

Микрошаг	1	2	4	8	16	32	64	128	5	10	20	25	40	50	100	125
PU/Rev	200	400	800	1600	3200	6400	12800	25600	1000	2000	4000	5000	8000	10000	20000	25000
SW8	ON	ON	ON	ON	ON	ON	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
SW7	ON	ON	ON	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	OFF	OFF	OFF	OFF
SW6	ON	ON	OFF	OFF	ON	ON	OFF	OFF	ON	ON	OFF	OFF	ON	ON	OFF	OFF
SW5	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF

Настройка выходного тока

Рабочий (RMS),	1.0	1.5	2.0	2.5	3.0	3.3	3.6	4.0	4.3	4.6	5.0	5.3	5.6	6.0	7.0	8.0
A																
Пиковый, А	1.4	2.1	2.8	3.5	4.2	4.6	5.0	5.6	6.0	6.4	7.0	7.4	7.8	8.4	9.8	11.2
SW4	ON	OFF														
SW3	ON	ON	ON	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON	OFF	OFF	OFF	OFF
SW2	ON	ON	OFF	OFF												
SW1	ON	OFF														