

Настройка выходного тока

Рабочий , А	2.0	2.57	3.14	3.71	4.28	4.86	5.43	6.0
Пиковый, А	2.4	3.08	3.77	4.45	5.14	5.83	6.52	7.2
SW3	ON	ON	ON	ON	OFF	OFF	OFF	OFF
SW2	ON	ON	OFF	OFF	ON	ON	OFF	OFF
SW1	ON	OFF	ON	OFF	ON	OFF	ON	OFF

SW4:

OFF=Половинный ток

ON=Полный ток