Настройка микрошага

PU/Rev	200	400	500	800	1000	1250	1600	2000	2500	3200	4000	5000	6400	8000	10000	12800
SW8	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON						
SW7	OFF	OFF	OFF	OFF	ON	ON	ON	ON	OFF	OFF	OFF	OFF	ON	ON	ON	ON
SW6	OFF	OFF	ON	ON	OFF	OFF	ON	ON	OFF	OFF	ON	ON	OFF	OFF	ON	ON
SW5	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON